



Quality Installation. From the Ground Up.  
Georgia Florida Tennessee South Carolina



### Badger® 1

Our Badger® 1 model provides offers a heavy duty motor and space-saving compact design.

InSinkErator Badger® food waste disposers are a reliable and functional choice when affordability is the prime concern. Choose from three models, each with a space-saving compact design.

With an InSinkErator® food waste disposer in your kitchen, chicken bones, fruit rinds, coffee grounds and more can go right in the sink -- where they're virtually liquefied to safely flow into your sewage system or septic tank. You'll enjoy a cleaner food preparation area, and less bagged garbage cluttering your home.


What's more, if you've never owned a food waste disposer, you're in for a pleasant surprise. InSinkErator® disposers are economical to operate: in fact, they're among the least expensive installed kitchen appliances.

### CLEANING DISPOSER

Over time, food particles may accumulate in the grind chamber and baffle. An odor from the disposer is usually a sign of grease and food buildup, caused by insufficient water flow during and after disposer use. To clean disposer:

1. Turn off disposer and disconnect power supply.
2. Place stopper in sink opening and fill sink halfway with warm water.
3. Mix 1/4 cup baking soda with water. Turn disposer on and remove stopper from sink at same time to wash away loose particles.

Disposers may also be cleaned with Disposer Care®. This product is not sold by InSinkErator®, but is generally available in major home centers, hardware, and grocery stores. For more information on Disposer Care®, contact Summit Brands at 1-888-476-6688 or [www.summitbrands.com](http://www.summitbrands.com).

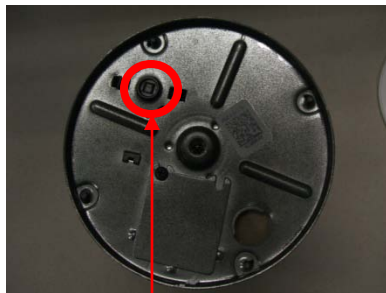

Reset Button



Wrenchette



Wrenchette in Center Hole

### RELEASING DISPOSER JAM

If motor stops while disposer is operating, disposer may be jammed. To release jam:

1. Turn off disposer and water.
2. Insert one end of self-service wrenchette into center hole on bottom of disposer (see Figure A). Work wrenchette back and forth until it turns one full revolution. Remove wrenchette.
3. Reach into disposer with tongs and remove object(s). Allow disposer motor to cool for 3 - 5 minutes, then lightly push red reset button on

disposer bottom (see Figure B). (If motor remains inoperative, check service panel for tripped circuit breakers or blown fuses.)